

How to Set Up and Use West Central TV on an Amazon Fire TV



My Amazon Account:

Username: _____

Password: _____

Wi-Fi Network:

SSID: _____

Password: _____

Using Your Fire TV Remote:

- Use the outer ring on the remote to navigate **UP**, **DOWN**, **LEFT**, and **RIGHT** within your Amazon device.
- Press the center of the ring to **SELECT** an item.
- To return to the Amazon Home screen, press the **HOME** button.
- Use the **BACK** button to go back to the previous screen.

Setting Up Your Fire TV Device:

1. Connect your Fire TV device to your TV's HDMI port and plug in the power adapter.
2. Use the USB cable to connect the power adapter to your Fire TV device.
3. Put batteries in your Fire TV remote.
4. Turn on your TV and switch to the correct HDMI input.
5. Follow the on-screen instructions to connect to Wi-Fi and install updates.
6. Sign in with your Amazon account. Follow the on-screen instructions.

Adding West Central TV to Your Fire TV Device:

1. Press the **HOME** button your remote.
2. Navigate **LEFT** to the find icon (magnifying glass).
3. Press **DOWN** to highlight the **Appstore** and press **SELECT**.
4. Once inside the Appstore, navigate to **Search** and then press **DOWN** and **SELECT**.
5. Type **West Central TV** or use the Voice Search to find the app.
6. Press **DOWN** to highlight the **West Central TV** app and press **SELECT**.
7. Select **Download** to download the app.

Accessing West Central TV on Your Fire TV Device:

1. Press and hold the **HOME** button on your remote for about 10 seconds.
2. Navigate to **Apps**.
3. Highlight the **West Central TV** icon and press **SELECT** to open the West Central TV app.
4. The first time you open the West Central TV app, you'll need to enter your West Central TV Initial Login and Passphrase. Contact our office if you haven't received these temporary credentials.

Login: _____

Passphrase: _____

Adding another device to your existing West Central TV subscription? See "Adding a New Device to Your West Central TV Subscription" on the back.



Standard Remote
(with voice controls)





Watching West Central TV

Accessing the Program Guide:

- From the **Amazon Home** screen, use your remote to highlight the West Central TV app and press **SELECT** on your remote.
- From a **currently airing program playing in the West Central TV app**, press the **BACK** button on your remote.

Navigating in the Program Guide and Watching a Channel:

1. Use the **UP** and **DOWN** arrows to scroll through the programs in the Program Guide.
2. Press the **PLAY/PAUSE** button to view the selected program. Or press **SELECT** on a highlighted program to see detailed information and management options including **Watch**, **Record** (see Making a Recording for more instructions), and **Search**.

Tab Bar: In the Program Guide, press the **BACK** button on your remote to open the Tab Bar. The Tab Bar provides access to **For You**, **Guide**, **Recordings**, **Search**, and **Settings** options.

Channel Surfing: While watching a currently airing program, use the **UP** or **DOWN** arrow on the remote to switch to the next higher or lower numbered channel.

Restart TV: From the Program Guide, highlight the program that you want to restart. Press **SELECT** to see detailed information and navigate to **Start Over**. Press **SELECT** to restart the program.

Rewind, Fast Forward or Pause Live TV:

- Use the **FAST FORWARD** button to advance and the **REWIND** button to go back.
- Press **PLAY/PAUSE** to pause and resume live TV.

Quick Guide:

1. While watching a program, press the **LEFT** arrow to display a Quick Guide showing your recently watched channels on the top of your TV screen.
2. Use the **RIGHT** and **LEFT** arrows to scroll through your previous channels.
3. Press **SELECT** on a highlighted channel to switch to it.

Recordings

Making a Recording:

1. When you select the **Record** option, you'll be presented with three choices: **Series–New Only**, **Series–All**, and **One-Time**.

2. Highlight your preferred option and press **SELECT** to set the recording.

Accessing and Managing Recordings:

1. Navigate to the Tab Bar and select **Recordings** option.
2. You'll see five categories:

Current Recordings: Watch or delete current recordings.

Future Recordings and Upcoming Recordings: Manage settings for your future and upcoming recordings, including adjusting Start/Stop Recording times.

Series Rules: Manage series recordings. You can specify the number of episodes to keep and choose between All Episodes and Only New Episodes. Adjust Start/Stop Recording times as needed.

Recently Deleted: Restore deleted recordings.

3. To navigate between each category, use the arrows on the remote.

Search

Accessing the Search Feature:

1. Navigate to the Tab Bar and select **Search**.
2. Type the name of a program.
3. Navigate to **Next** and press **SELECT**.
4. Highlight a program and press **SELECT** on your remote.
5. If it's a currently airing program, you can highlight **Watch** and press **SELECT** on your remote. Or you have the option to select **Record** to add it to your future recordings.

Settings

Adding a New Device to Your West Central TV Subscription:

(You can have up to 20 devices on your account.)

1. Go to the **Settings** option in the Tab Bar.
2. Navigate to **Account**.
3. Scroll down using the **DOWN** arrow on your remote and highlight **Add Device**.
4. Press **SELECT** on your remote to generate a Login and Passphrase for the new device.
5. Follow the instructions under Access West Central TV to add West Central TV to your new Fire TV device using the provided credentials.